

SLSC Module Addon - Status Parameters

This **SLSC Module Addon** provides the ability to monitor and communicate with SLSC Module Prototype inside a SLSC Chassis. The Status Parameters are used to monitor and control specific parameter that define the status of the Addon.

What do you want to do?

Make a connection to the SLSC Mod Error Number

Connect to the **SLSC Mod Error Number** channel if you want to see the errors generated by the custom device that could not be reported through VeriStand. An error is reported as a code different than zero. A warning is reported a positive number. To understand this code, you must reference the Module's user manual.

Make a connection to the SLSC Mod Loop Rate

Connect to the **SLSC Mod Loop Rate** channel if you want to measure the loop rate of the Asynchronous Loop Rate of the Module Addon. This value can be modified by writing to the **SLSC Mod Update Rate**

Make a connection to the SLSC Mod Update Rate

Write to the **SLSC Mod Update Rate** channel if you want to change the loop rate of the Asynchronous Loop Rate of the Module Addon. This value can be measured by reading the **SLSC Mod Loop Rate**